 



Installation Menu

Installation(One end input)

1. Without inductive ballast or electronic ballast, install according to the following diagram:



2. With an inductive ballast base:

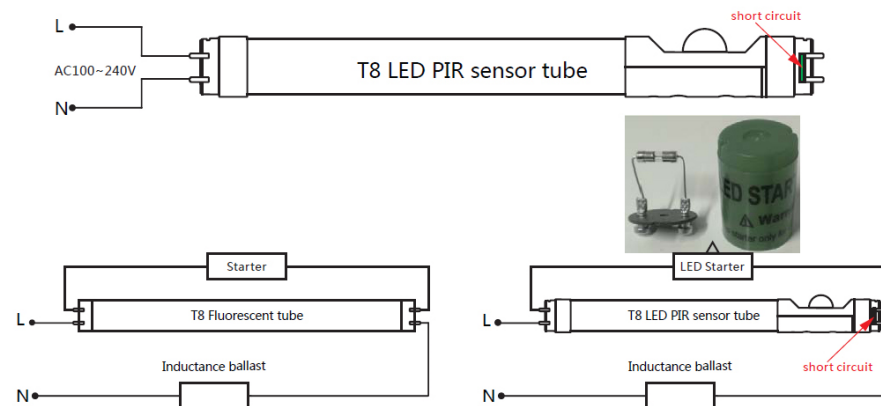

3. With electronic ballast base:

