

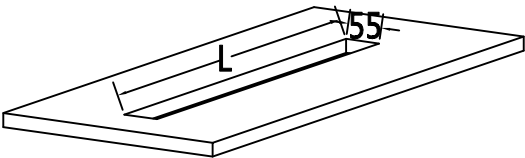



# Recessed Installation Guide

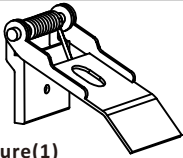


Model	Installation Dimension“L”	Installation Dimension“L2”	Quantity picture(1)	Quantity picture(2)	Quantity picture(3)	Spring bracket	PWM4 Screw
LABITY Series			x4	x4		 Picture(1)	 Picture(1)




1.Open holes on the gypsum board  
(Width=55mm,Length of product determines the size of holes)

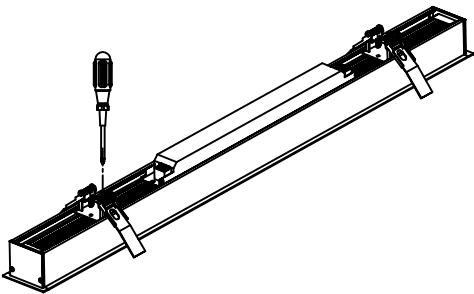



2.Use screwdriver to fix the spring brackets at the back of luminaire.

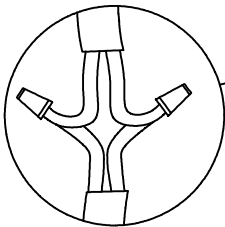

3.Use wire fixing connectors to connect luminaires with AC.

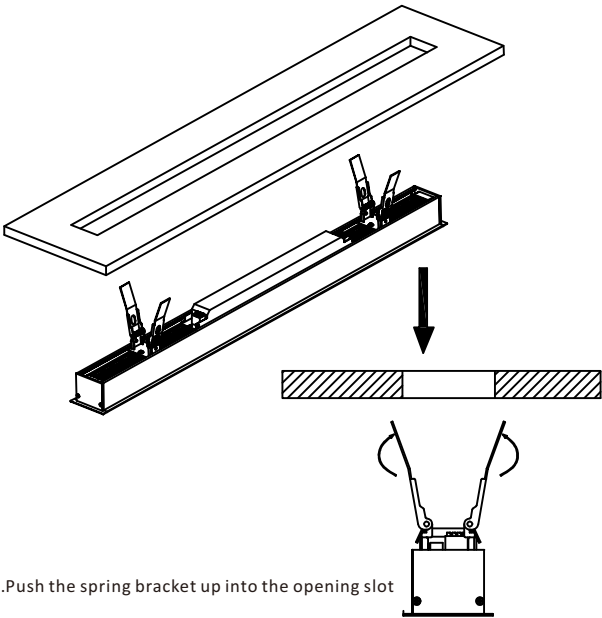

4.Push the spring bracket up into the opening slot

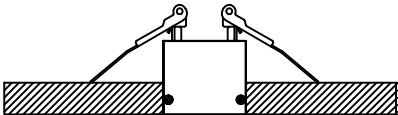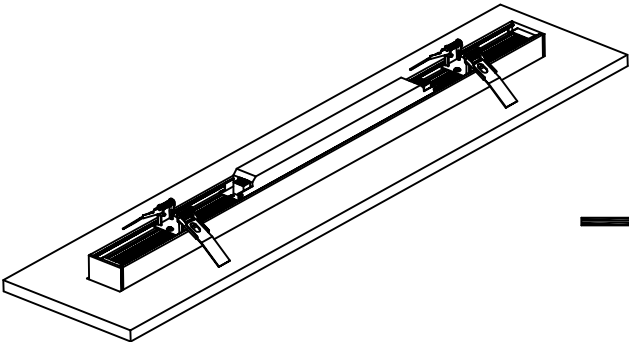

5.Installation finished