



DA4-D

4 Channel Constant Voltage DALI LED Dimmer



- 4 channel constant voltage DALI LED Dimmer with digital display, 5A per channel.
- support 1-4 DALI address, 4 channel work separately.
- In accordance with DALI standard protocol IEC 62386-102, IEC 62386-207, IEC 62386-209 and in compliance with DALI products from other international incorporation.
- DALI address can be manually assigned and shown in digital display or automatically assigned by DALI master.
- Connect with external AC push switch to achieve on/off, brightness, color temperature and RGB color adjustment.
- PWM digital dimming, standard DALI logarithmic dimming curve.
- PWM frequency 1000/2000/4000/8000/16000Hz selectable.
- Over-heat / Over-load / Short circuit protection, recover automatically.
- With fast self-testing function.
- White & Black available.

Technical Data

Input voltage	12-48VDC
Input signal	DALI and AC Push
Output type	PWM constant voltage-PWM frequency 1000/2000/4000/8000/16000Hz selectable
Output current	4x5A@12/24V 4x3A@36/48V
Output power	• 240W@12V • 480W@24V • 432W@36V • 576W@48V
Decode number:	4 Channel
Dimming range	0-100%
Working temperature	-30 °C~55 °C
Case temperature (Max.)	T c: +85°C
Protection	Reverse Polarity Over-heat Over-load Short circuit
Dimension	L120 x W78 x H55mm
IP rating	IP20
Weight	0.144kg
Gross weight	0.164kg
Certification	 

Project	Fixture#	Date
		Firm



Ordering Information





Choose the option that suits your need and write its corresponding code on the appropriate line to form the product code.

Example product code:

DA4-D -

Technical Drawing

DIMON
TECHNOLOGY

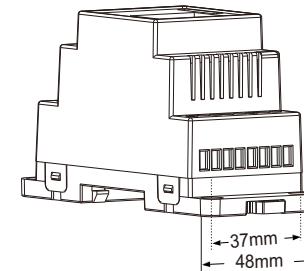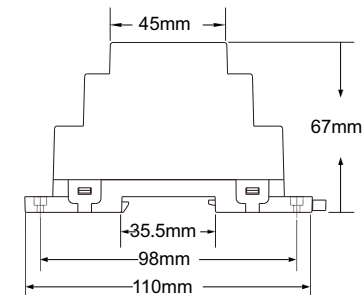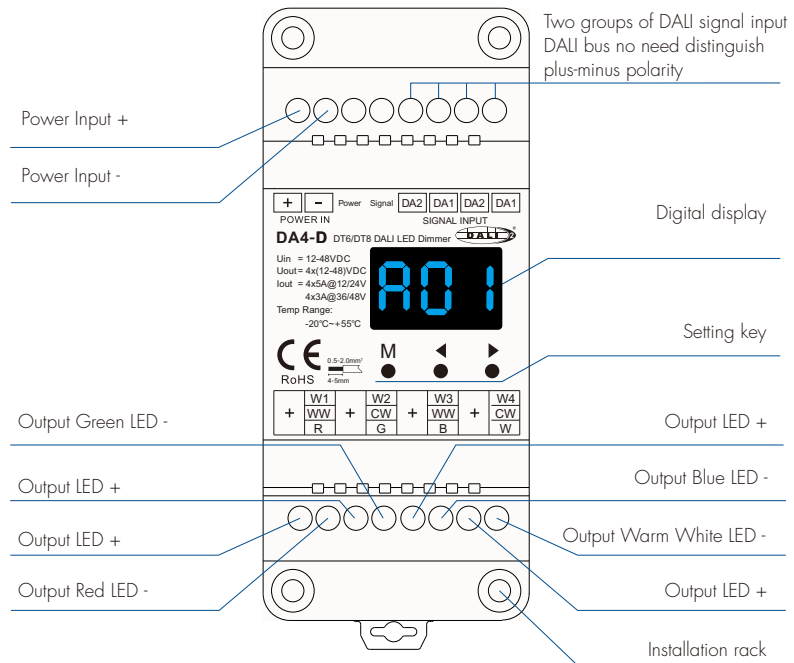


DIN Rail Mounting Size:
TS-35/7.5 or TS-35/15

Unit: mm


Wiring Diagram

1. DA4-D connect DALI master


- Apply to single color dimming (1CH, 2CH, 3CH, 4CH)

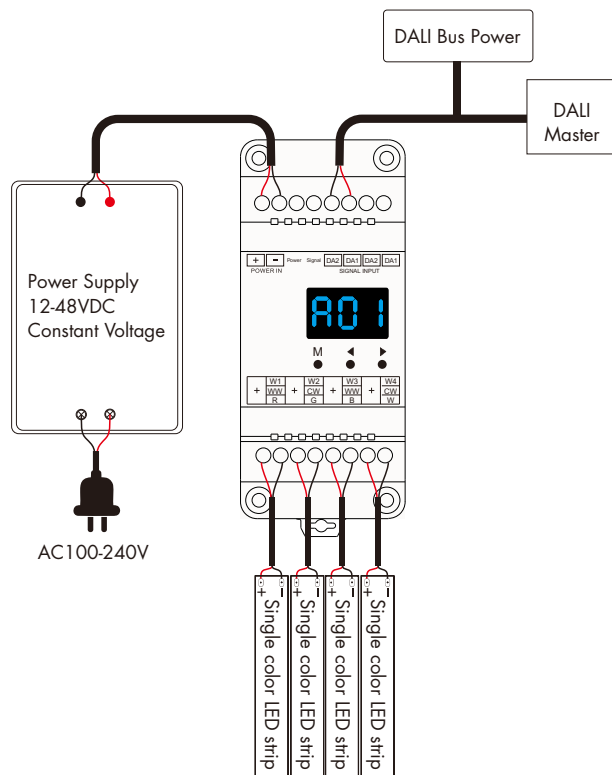


- Apply to color temperature dimming (C-2)

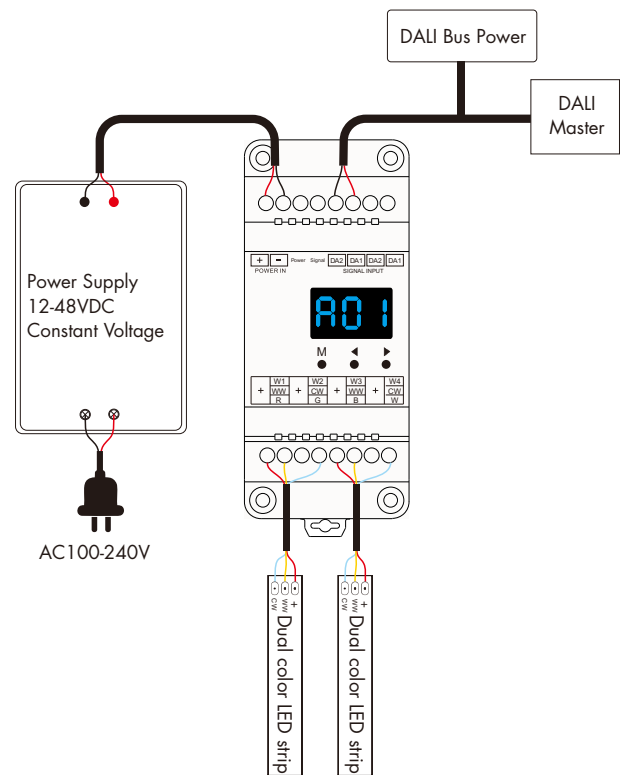

- Apply to RGB dimming (C-3)

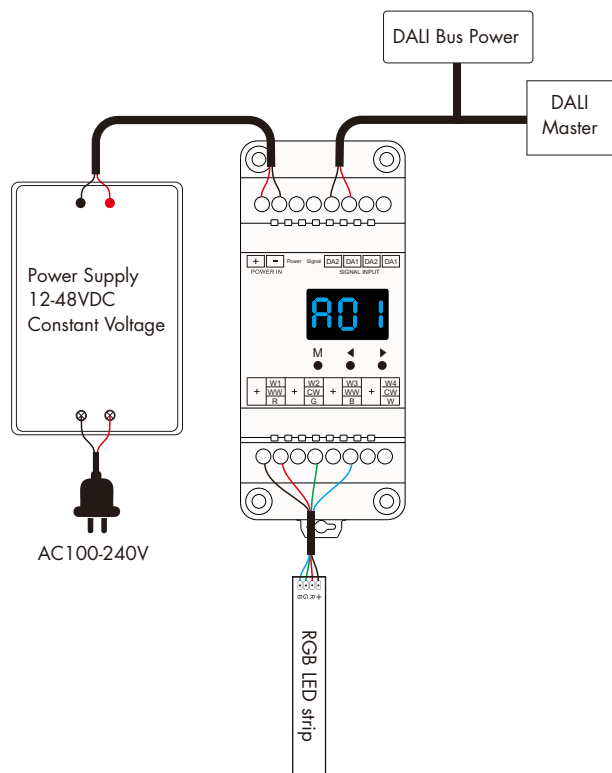


- Apply to RGBW dimming (C-4)

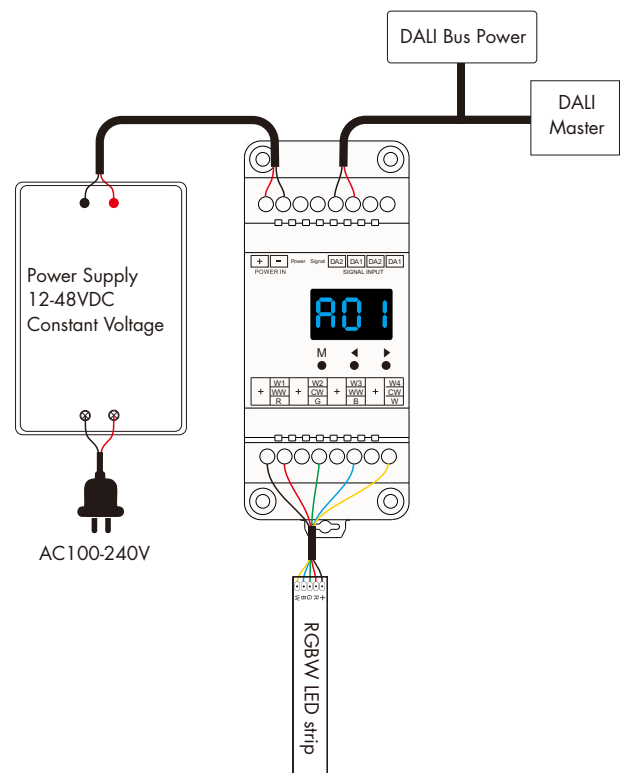


2. DA4-D connect with AC push switch

- Apply to color temperature dimming

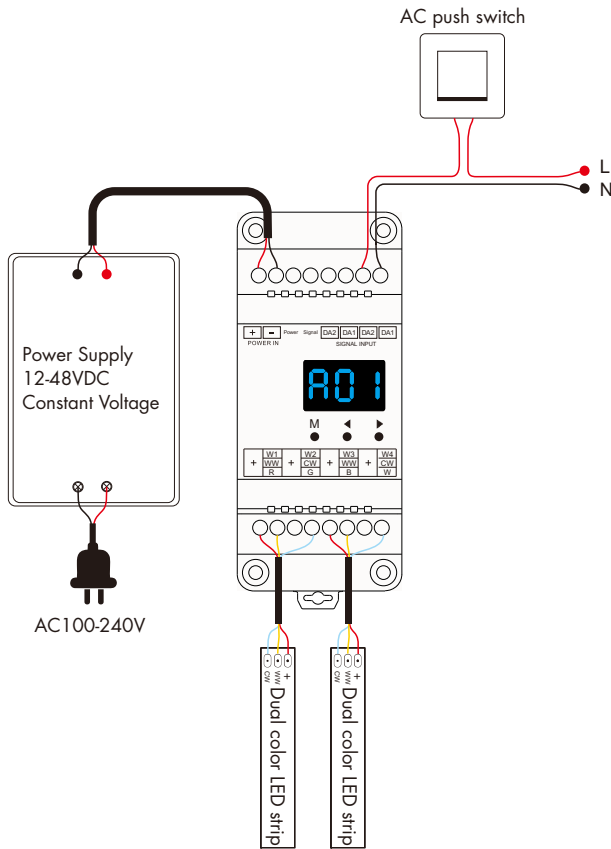

- Apply to RGBW dimming

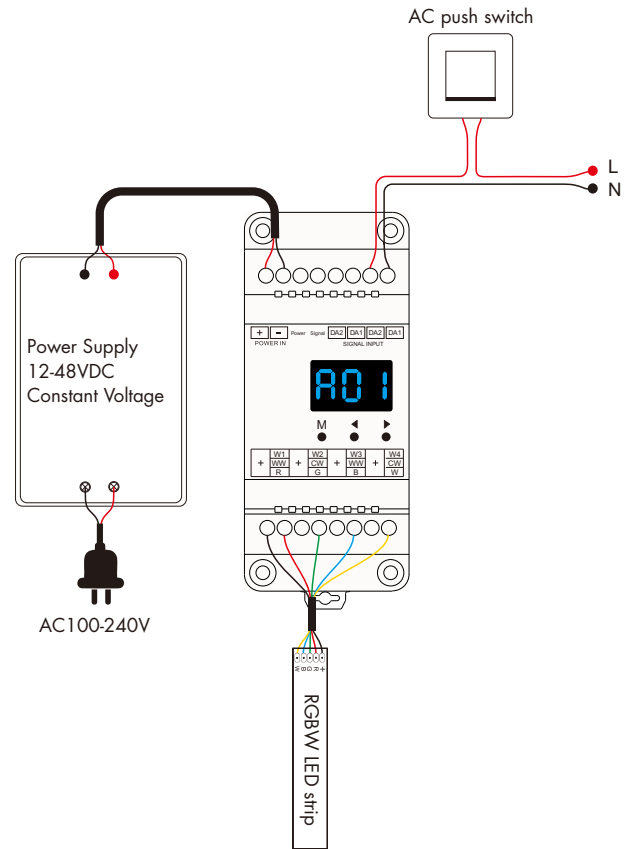

Note:

1. When display OLA, overload alarm. When display OHA, overwarm alarm.
2. DALI interface and AC push interface are compatible, DALI and AC push can only be connected to one, not at the same time. When connecting to the AC push switch, note that the fire wire (L) and zero wire (N) are connected to DA1 and DA2 respectively, and can not be connected to DA1 or DA2 at the same time.

AC push switch function

1. Single color dimming

- **Short press:** Turn on/off the light.
- **Long press (1-6s):** Step-less dimming, with every other long press, the light level goes to the opposite direction, dimming range 1%-100%.
- **Double click:** Switch between 10% and 100% brightness.

2. Color temperature dimming

- **Short press:** Turn on/off the light.
- **Long press (1-6s):** Step-less dimming, with every other long press, the light level goes to the opposite direction, dimming range 1%-100%.
- **Double click:** Switch between three levels color temperature (warm white, neutral white, cool white) in sequence, at the same time, enter the state of long-press to adjust color temperature. After 5s of no operation, it will automatically exit color temperature adjustment state.

3. RGB dimming

- **Short press:** Turn on/off the light.
- **Long press (1-6s):** Step-less dimming, with every other long press, the light level goes to the opposite direction, dimming range 1%-100%.
- **Double click:** Switch between color light (RGB) and mixed white light (current color light + 50% saturation), at the same time, enter the state of long press to adjust color light or saturation. After 5s of no operation, it will automatically exit color light or saturation adjustment state.

4. RGBW dimming

- **Short press:** Turn on/off the light.
- **Long press (1-6s):** Step-less dimming, with every other long press, the light level goes to the opposite direction, dimming range 1%-100%.
- **Double click:** Switch between color light (RGB) and white light (W), at the same time, enter the state of long press to adjust color light or white light brightness. After 5s of no operation, it will automatically exit color light or white light brightness adjustment state.

Light type setting

- When using it for the first time, please set the light type according to the application.
- Long press M button for 2s, to prepare for setting the light type, the digital display flashes.
- Short press the ◀ or ▶ button to switch the single color ("1CH/2CH/3CH/4CH"), dual color ("C-2"), RGB ("C-3") or RGBW ("C-4") light type.
- Short press the M button or timeout for 10 seconds to exit the light type setting.

Light type setting instructions:

- When set "1CH" type, DT6 dimming, the dimmer occupy 1 DALI address,
CH1, CH2, CH3, CH4 will be the same DALI address, 4-channel output is the same.
- When set "2CH" type, DT6 dimming, the dimmer occupy 2 DALI address,
CH1, CH3 will be same DALI address A, CH2, CH4 will be same DALI address A+1.
- When set "3CH" type, DT6 dimming, the dimmer occupy 3 DALI address,
CH1 will be DALI address A, CH2 will be DALI address A+1, CH3 will be DALI address A+2, CH4 no DALI address and no output.
- When set "4CH" type, DT6 dimming, the dimmer occupy 4 DALI address,
CH1 will be DALI address A, CH2 will be DALI address A+1, CH3 will be DALI address A+2, CH4 will be DALI address A+3.
- When set "C-2" type, DT8-TC dimming, the dimmer occupy 1 DALI address,
CH1 and CH3 synchronized output WW (warm white), CH2 and CH4 synchronized output CW (cool white).
- When set "C-3" type, DT8-RGB dimming, the dimmer occupy 1 DALI address,
the 4th channel does not output.
- When set "C-4" type, DT8-RGBW dimming, the dimmer occupy 1 DALI address,
4 channels are output independently.



DT6, 1CH



DT6, 2CH



DT6, 3CH



DT6, 4CH



DT8-TC



DT8-RGB



DT8-RGBW

For example, the start DALI address is 32:

When set "1CH" type, the dimmer occupy 1 DALI address and address is 32.
When set "2CH" type, the dimmer occupy 2 DALI addresses and address is 32,33.
When set "3CH" type, the dimmer occupy 3 DALI addresses and address is 32,33,34.
When set "4CH" type, the dimmer occupy 4 DALI addresses and address is 32,33,34,35.
When set "C-2" type, the dimmer occupy 1 DALI address and address is 32.
When set "C-3" type, the dimmer occupy 1 DALI address and address is 32.
When set "C-4" type, the dimmer occupy 1 DALI address and address is 32.

Set DALI Address via buttons

- Long press ◀ or ▶ button for 2s, prepare for set the start DALI address, then press ◀ or ▶ button to set the start DALI address.
- Short press M button or timeout 10s, quit start DALI address setting.
- The start DALI address can be manually assigned from 00-63-FF.
- By factory defaults, no DALI address is assigned for the dimmer, and digital display shows "AFF".

DALI address assigned by DALI masters

- DALI address can also be assigned by DALI Master controller automatically. Please refer to user manuals of compatible DALI Masters for specific operations.
- The digital display will show "AAU" When the DALI master is assigning address.
- After address is assigned, the digital display will show the DALI address "Axx", xx is from 00 to 63.
- For the DT6 2/3/4 channel dimming type, the dimmer occupies 2/3/4 DALI addresses,
use the DALI master assigning address may result in discontinuous addresses, then the digital display will show the DALI start address "Uxx".

Set PWM frequency

- Long press M & ◀ button to enter PWM frequency setting.
- Short press ◀ or ▶ button to switch between 1000Hz("F10"), 2000Hz("F20"), 4000Hz("F40"), 8000Hz("F80") or 16000Hz("FA0").
Higher PWM frequency, will cause lower output current, higher power noise, but more suitable for camera (No flickers for video).
- Short press M button or 10s without operation, exit system parameter setting.

Restore factory default parameter

- Long press ◀ and ▶ button for 2s, restore factory default parameter, display "RES".
- Factory default parameter: no DALI address is assigned, DT6 four channel dimming, PWM frequency is 2000Hz.
- Long press M and ▶ button for 2s, enter fast self-testing, the four output channels will be on orderly then all on.

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.